




MA-58 R.I.S.戰術護木組裝方式 Attach the rail interface system

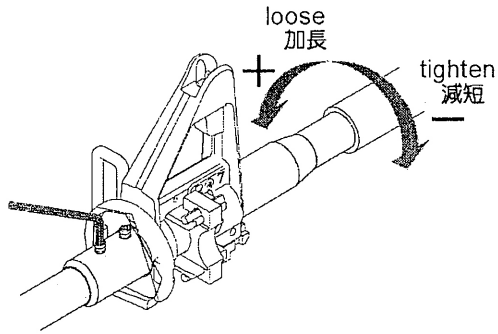


安裝R.I.S.護木時，先將槍管前端固定螺絲鬆開，將槍管前段向左旋轉一圈，並將固定螺絲鎖緊。
Before install R.I.S. system, MUST have to loose screws at the front of the barrel. Turn anticlockwise one round and tighten screws.

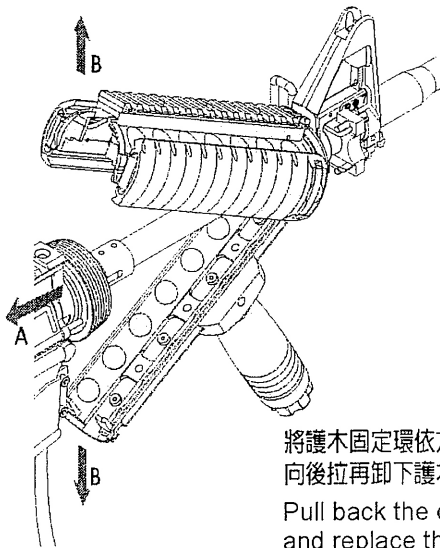


將護木固定環依方向向後拉再卸下護木。
Pull back the delta ring and replace the R.I.S. .

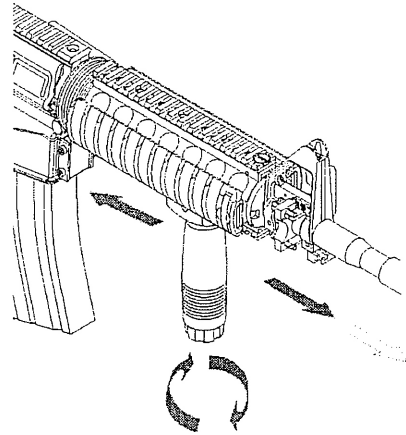

依方向鬆開握把螺絲即可調整戰術握把的位置
Lose the joint dial to adjust the fore grip to personal preference.

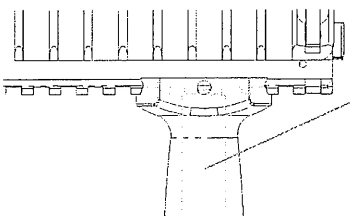


固定銷對準軌道條上的凹槽再將握把鎖緊
Make sure the grooves on the fore grip are properly in position.

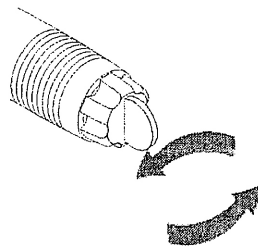


可使用銅板或手將握把螺絲鬆開
Use a coin or hand


MA-58 R.I.S.戰術護木組裝方式 Attach the rail interface system

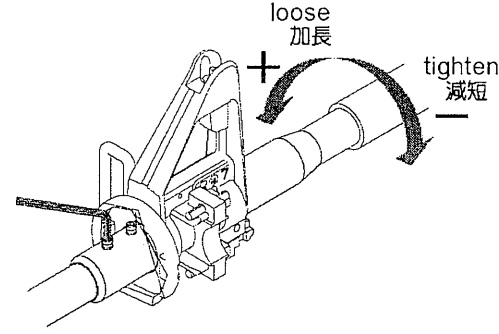


安裝R.I.S.護木時，先將槍管前端固定螺絲鬆開，將槍管前段向左旋轉一圈，並將固定螺絲鎖緊。
Before install R.I.S. system, MUST have to loose screws at the front of the barrel. Turn anticlockwise one round and tighten screws.

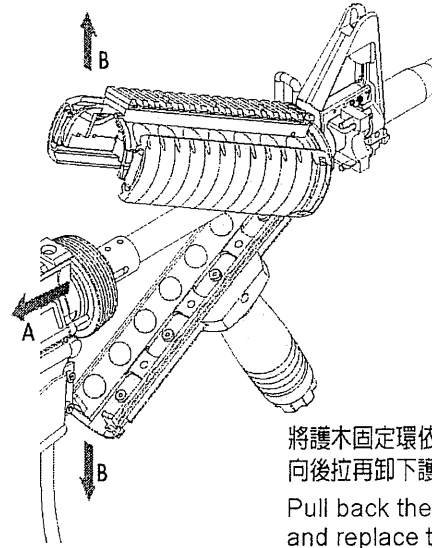


將護木固定環依方向向後拉再卸下護木。
Pull back the delta ring and replace the R.I.S. .

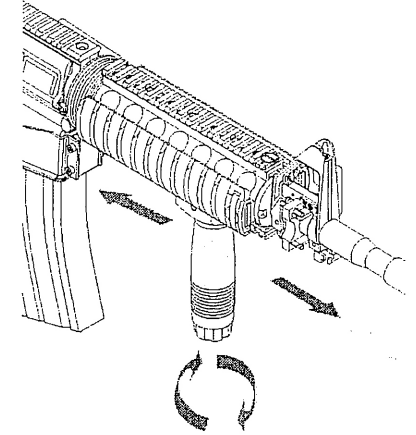

依方向鬆開握把螺絲即可調整戰術握把的位置
Lose the joint dial to adjust the fore grip to personal preference.

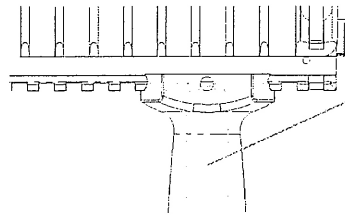

固定銷對準軌道條上的凹槽再將握把鎖緊
Make sure the grooves on the fore grip are properly in position.

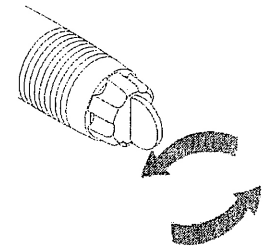

可使用銅板或手將握把螺絲鬆開
Use a coin or hand